


Charger 12V serie
and starter battery

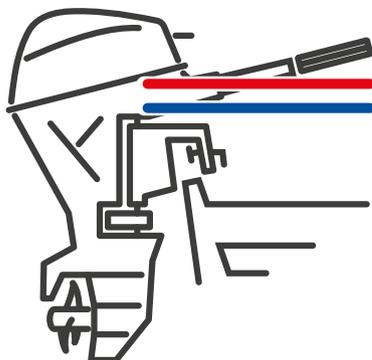

Service network 2x 6mm²
to fuse box



JAROCELLS BT120.12 or
BT150.12 or BT60.12 START

Charger 24V or 36V serie



Alternator



Starter motor



JAROCELLS Range Extender
JRE 12/24-20A or JRE 12/36-13A



JAROCELLS BT100.24
or BT60.24 (2 pcs in parallel)
JAROCELLS BT100.36
or BT30.36 (2 or 3 pcs in parallel)